SAMSUNG

# Operating Instructions

# *Samsung Smart Drum Vacuum Cleaner*

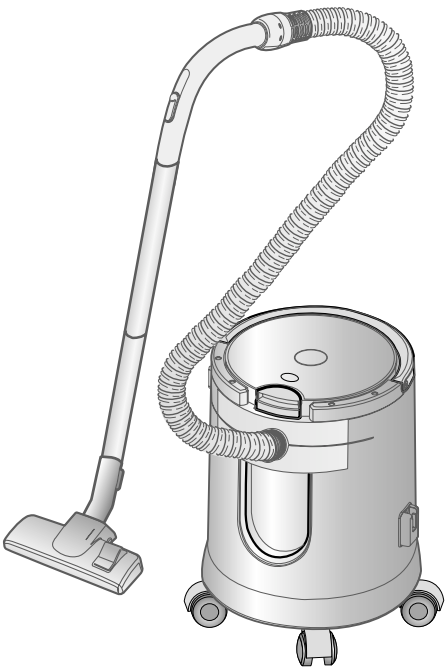

❋ Before operating this unit, please read the instructions carefully.
❋ Indoor use only.

Register your product at www.samsung.com/global/register

DJ68-00260F REV(0.2)

## *IMPORTANT SAFEGUARDS*

When using an electrical appliance, basic precautions should always be followed, including the following :

1. Read all instructions before using this vacuum cleaner.
2. This machine is suitable FOR INDOOR USE ONLY.
3. Before using the vacuum cleaner, make sure that the voltage shown on the rating plate on the side of the machine corresponds with the mains voltage.
4. If this machine is not correctly operating with any problem such as strange noise, smell or smoke from it, switch it off and consult the authorized service agent.
5. Keep the machine away from heat sources which can make the plastic parts of the unit deform and discolor.
6. Do not spray flammable or combustible liquids such as gasoline on the cleaner.
7. Do not step and put a weight on the cord and hose.
8. The use of an extension cord is not recommended and don't put plug in the electrical outlet working with other electric appliances.
9. This machine must not be used without the bucket and filter. empty the bucket before it is full in order to maintain the best efficiency.
10. Overheating can be caused by blockage in the filter, nozzle, tube or hose. After removing the cause and cooling the motor, vacuum cleaner automatically start again.
11. Do not connect plug when not in use.

## *WARNING*

1. Remove water or dust on plug with dry towel, also don't handle plug and this machine with wet hands.
2. Turn machine off before unplugging.Do not unplug by pulling on cord.
3. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
4. This machine must not be used if there are harmful gases in the house. Let the house ventilated.
5. This machine must not be used as a toy or chair.
6. The appliance is not intended for use by young persons or infirm persons without supervision.
7. This machine must not be used on wet carpet or floor and Do not immerse in water.
8. The plug must be removed from the socket outlet before cleaning or maintaining the appliance.
9. This machine must not be used for picking up hard, sharp, explosive materials and a bubbly detergent.
10. This appliance is not intended for use by young persons or infirm persons without supervision unless they have been adequately supervised by a responsible person to ensure that they can use the appliance safely.
11. Young children should be supervised to ensure that they do not play with the appliance.

# 1 ASSEMBLING PARTS

## IDENTIFICATIONS OF PARTS

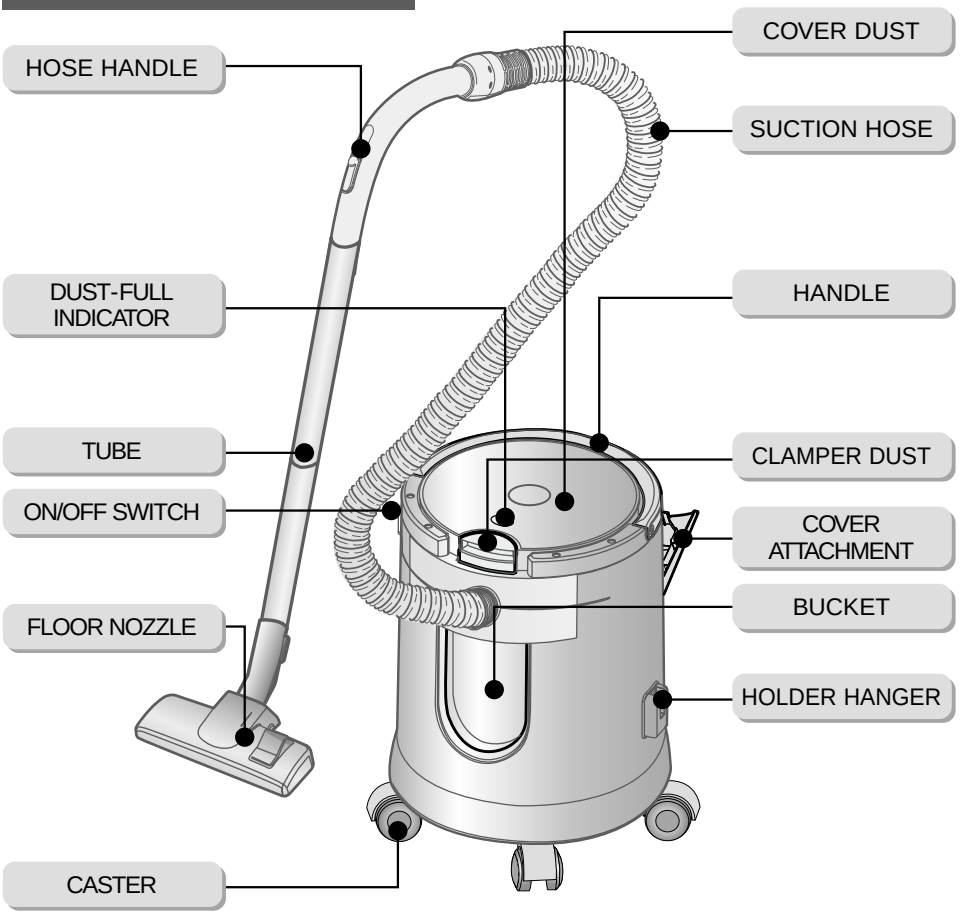


## ATTACHMENTS



TUBE*

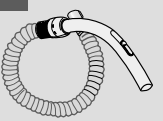

SUCTION HOSE

CREVICE TOOL

FLOOR NOZZLE

DUSTING BRUSH



FLOOR BRUSH*

▶ **Features marked * may vary according to model.**

# 2 ASSEMBLING THE VACUUM CLEANER

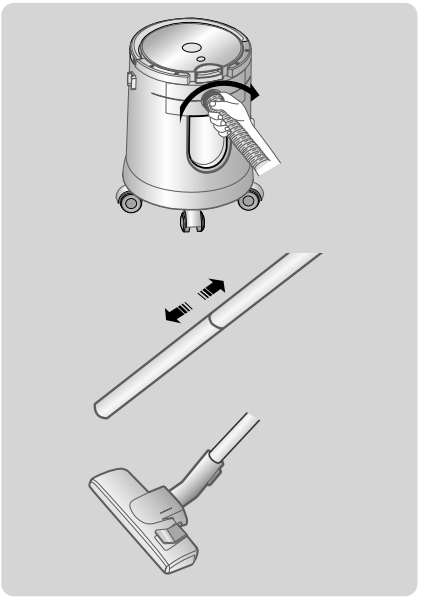

### 1) Attaching the Suction Hose to the Cleaner

Slide the Suction Hose Clamper to the Suction Inlet of the Cleaner and Turn it clockwise until it "clicks" into place.

### 2) Attaching the Tube to the Suction Hose

Slide the narrow end of the Suction Hose section into the end of the tube.

### 3) Attaching the Floor Nozzle

Slide deeply the free end of the Tube into the Floor Nozzle.

## ASSEMBLING ACCESSORIES

➤ **When attaching to the Suction Hose**

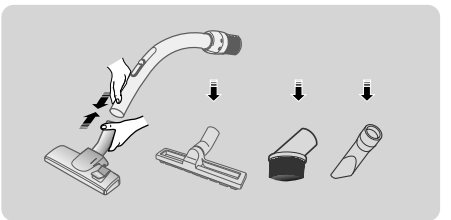

➤ **When attaching to the Tube**

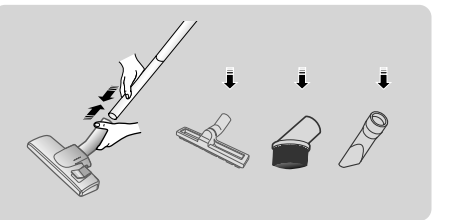

➤ **When using the Tube**

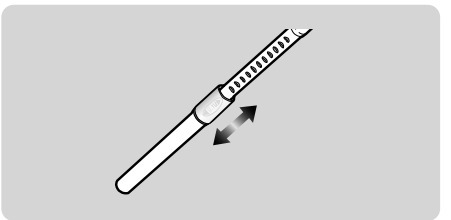

**OPTION**

Adjusting the telescopic tube (depending on model).

# 3 OPERATION

## ON/OFF SWITCH

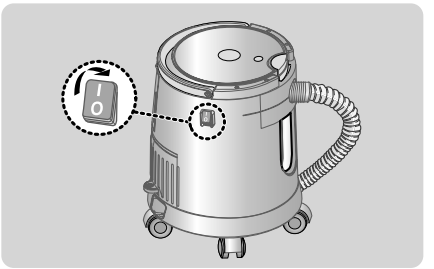

Press down "I" button at the top left side of the Body.

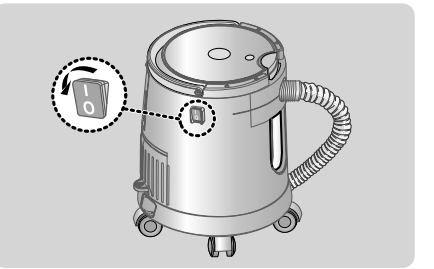

After cleaning, Press down "O" button at the top left side of the Body.

## POWER CORD

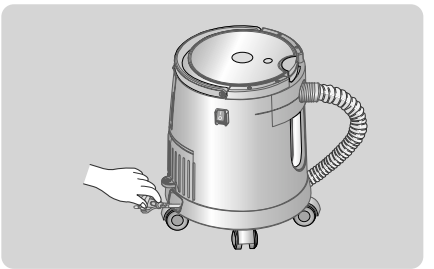

**PULLING OUT**
The long power cord can be drawn out for your convenience.

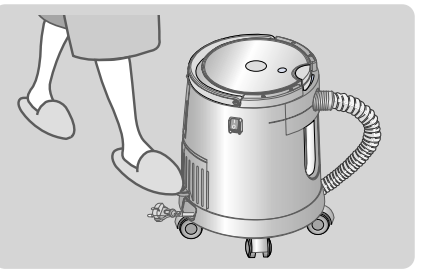

**REWINDING**
After disconnecting the plug from the electrical outlet,press the cord rewind button lightly with your toe.The cord will automatically rewind.

**NOTE**
When removing the power cord from the electrical outlet,grasp the plug,not the cord.

## BRUSHES

**FLOOR NOZZLE**

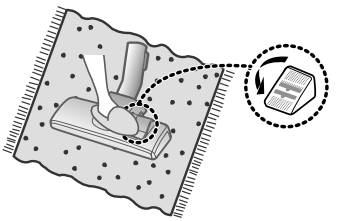

Using on Carpet

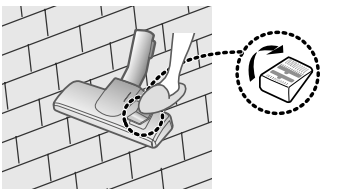

Using on Tile or Floor

**DUSTING BRUSH**

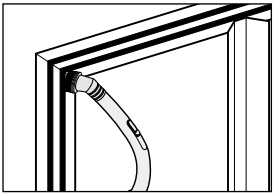

Dusting brush for furniture, shelves, books, etc.

**CREVICE TOOL**

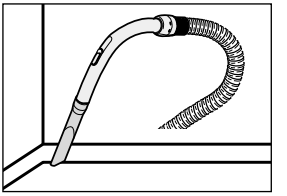

Crevice tool for radiators, crevices, corners, between cushions.

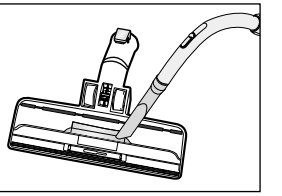

For efficiency, clean Floor Nozzle with Crevice Tool.

## *BUCKET AND FILTER*

⚠ **Caution :** disconnect Plug before discarding dusty materials

1

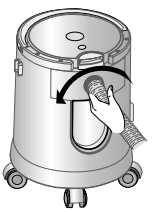

Turn the Suction Hose Clamper counterclockwise and pull it out.

2

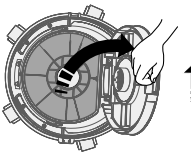

Open the Cover Dust.

3

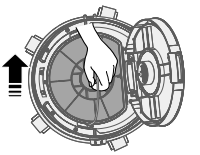

Hold the Bucket Handle and pull the bucket out.

4

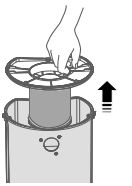

Detach Filter.

5

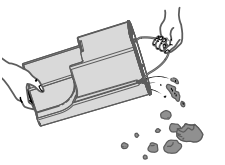

Dispose dusty materials.

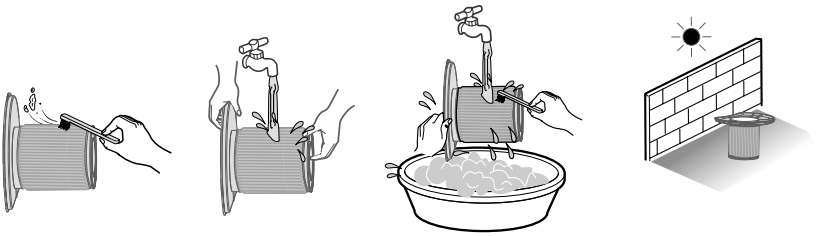

After using,if the filter is full of dust,clean it as picture and use it again.

# 4 TOOL STORAGE

## PARK POSITION

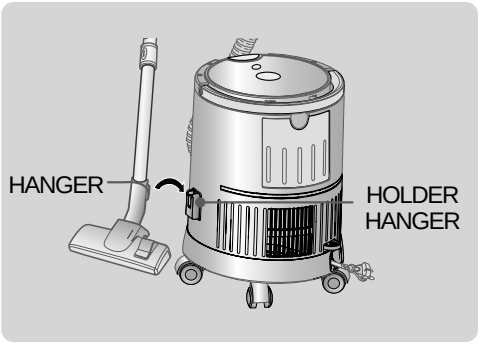


For easy storage,this vacuum cleaner has a hanger system built on the body, which will keep the Tube, Suction Hose and Floor Nozzle in a vertical position.

## ACCESSORIES

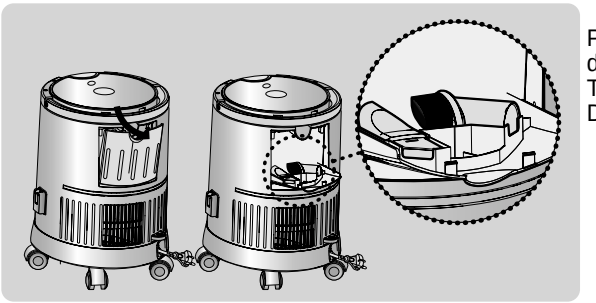

Pull the Cover Attachment downward for using Accessory Tools and keep Crevice Tool and Dusting Brush as pictures.

# 5 SAFETY EQUIPMENT

## THERMAL CUT-OUT PROTECTION

The vacuum cleaner is provided with a self-resetting thermal cut-out protection which automatically shut off current on over heating.Overheating can be caused by blockage in the filter, nozzle, tube or hose.After removing the cause and cooling the motor,vacuum cleaner automatically start again.

# 6 TROUBLESHOOTING

## - IF YOU HAVE A PROBLEM

| PROBLEM | CAUSE | REMEDY |
|---|---|---|
| Cleaner doesn’t run. | Not firmly plugged in. | Plug unit in firmly. |
| Poor job of dirt pickup. | Clogged hose or filter, tube, nozzle. | Remove the object. |
| Cord doesn't rewind fully | Check that the cord is not twisted or wound unevenly. | Pull the cord out 2~3m and push down the cord rewind button. |
| Cover dust comes out. | Doesn't break down. | Insert it in the cleaner. |

تعليمات التشغيل

SAMSUNG

# المكنسة الكهربائية برميل من سامسونج

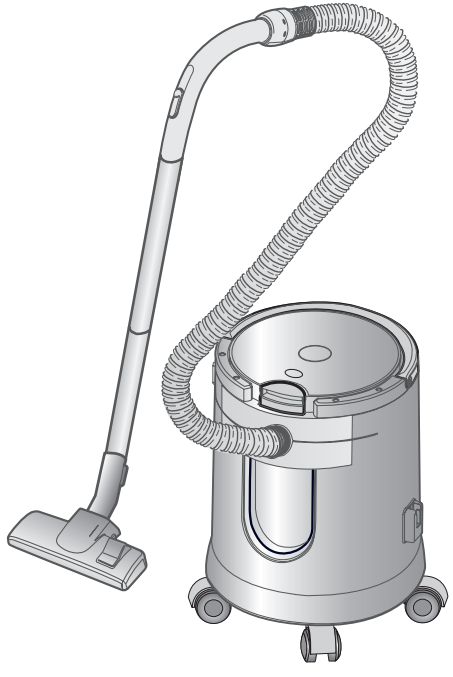

* قبل تشغيل هذا الجهاز، يرجى قراءة هذه التعليمات بعناية.
* الاستخدام في الداخل فقط.

قم بتسجيل منتجك على www.samsung.com/global/register

DJ68-00260F REV(0.2)

## تعليمات هامة من أجل السلامة

عند استخدام جهاز كهربائي، لا بد من إتباع التنبيهات الأساسية ، بما فيها الأمور التالية:

١. اقرأ جميع التعليمات قبل تشغيل هذه المكنسة الكهربائية.

٢. هذه المكنسة مناسبة للاستخدام في الداخل فقط.

٣. قبل استخدام المكنسة الكهربائية ، تأكد من أن الفولتية المبينة في صفيحة الطاقة الكهربائية الموجودة في جانب الجهاز تنطبق على الفولتية الرئيسية.

٤. إذا لم تعمل المكنسة بشكل صحيح بسبب أي مشكلات مثل الضجيج الغريب أو الرائحة أو الدخان من المكنسة ، اوقف المكنسة عن العمل واتصل بمركز الخدمات المختص.

٥. ضع المكنسة بعيدا عن مصدر الحرارة التي قد تؤدي الى تشويه الأجزاء البلاستيكية وتحويل لونها.

٦. لا ترش السوائل القابلة للاشتعال أو الانفجار مثل الغاز ولين على المكنسة.

٧. لا تضغط بالقدم أو تضع ثقلا على سلك التيار أو الخرطوم.

٨. استخدام السلك الإضافي غير موصى به ولا توصل قابس المكنسة الى مخرج التيار الكهربائية العامل مع الأجهزة الكهربائية الأخرى.

٩. لا بد من عدم استخدام هذه المكنسة بدون دلو ومصفاة. فرّغ الدلو قبل امتلائه بالغبار من أجل الاحتفاظ بأفضل كفاءة.

١٠. التسخين الزائد قد يؤدي الى سد المصفاة أو الفوهة أو الخرطوم. بعد حل السبب وتبريد الموتور ، تبدأ المكنسة الكهربائية بالعمل من جديد أوتوماتيكيا.

١١. لا توصل قابس التيار في حالة عدم تشغيل الجهاز.

## تحذيرات

١. امسح الماء أو الغبار الموجود على القابس بمنشفة جافة، كما لا تتناول القابس والمكنسة الكهربائية باليد المبللة.

٢. اوقف المكنسة الكهربائية عن العمل قبل نزع القابس من مخرج التيار. لا تنزع القابس بسحب السلك.

٣. إذا كان حدث ضرر في سلك التيار الكهربائي، لا بد من استبداله من قبل الصانع أو وكيل الخدمات له أو الفني المؤهل المثيل من أجل تجنب خطر.

٤. لا بد من استخدام هذه المكنسة في حالة وجود الغازات الضارة في المنزل. قم بالتهوية في المنزل.

٥. لا بد من عدم استخدام هذه المكنسة كلعبة أو كرسي.

٦. هذا الجهاز غير مصمم للاستخدام من قبل الصغير أو العاجز بدون إشراف عليه.

٧. لا بد من عدم استخدام هذا الجهاز على السجادة أو الأرض المبللة ولا تنقع الجهاز بالماء.

٨. لا بد من نزع القابس من مخرج التيار قبل تنظيف الجهاز أو إصلاحه.

٩. لا بد من عدم استخدام هذا الجهاز لالتقاط الأشياء الصلبة والحادة والرقيقة ومسحوق الغسيل الرغوي.

١٠. هذا الجهاز غير مصمم للاستخدام من قبل الصغير أو العاجز بدون إشراف عليه باستثناء الإشراف عليه من قبل شخص مسؤول يضمن أنه يستطيع استخدام الجهاز بسلامة.

١١. لا بد من الإشراف على الأطفال الصغار لضمان أنهم لا يعبثون بالجهاز.

# ١ أجزاء التجميع

## تعريف الأجزاء

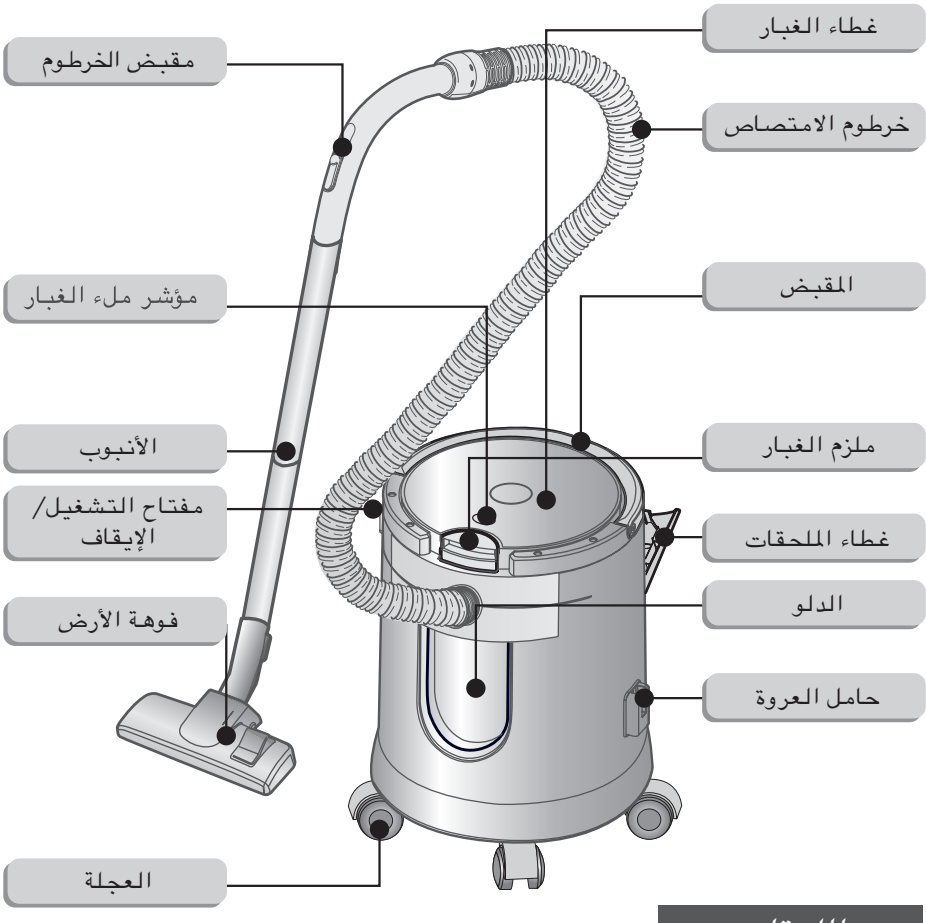


## الملحقات

◄ الخصائص التي تحمل العلامة * قد تختلف حسب الموديل.

# ٢ تجميع المكنسة الكهربائية

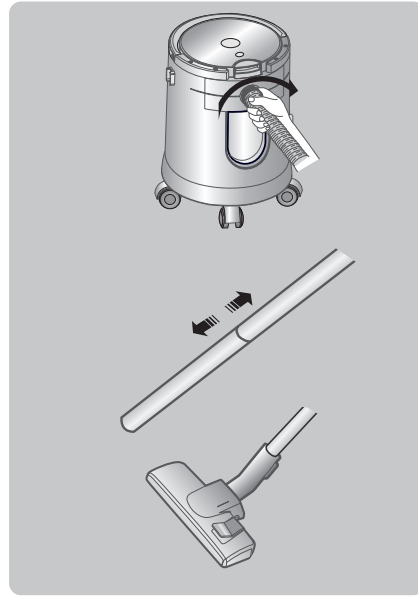

١) ربط خرطوم الامتصاص بالمكنسة الكهربائية
ازلق ملزم خرطوم الامتصاص الى مدخل الامتصاص للمكنسة ودوّره باتجاه عقرب الساعة حتى تسمع صوت "الإغلاق" في مكانه.

٢) ربط الأنبوب بخرطوم الامتصاص
ازلق الطرف الضيق لخرطوم الامتصاص الى نهاية الأنبوب.

٣) ربط فوهة الأرض
ازلق طرف الأنبوب غير الموصول الى فوهة الأرض بعمق.

## تجميع الملحقات

➤ عند ربطها بخرطوم الامتصاص

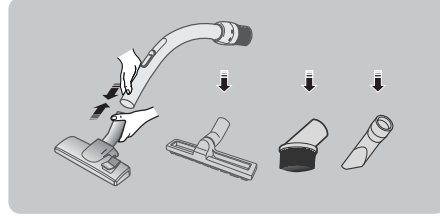

➤ عند ربطها بالأنبوب

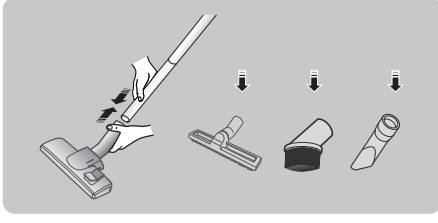

➤ عند استخدامها مع الأنبوب

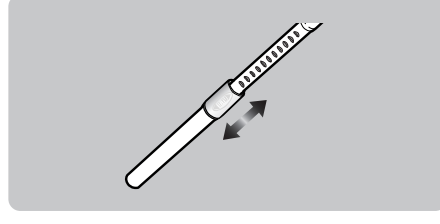

**اختياري**
تعديل الانبوب التليسكوبي (حسب الموديل).

# ٣ التشغيل

## مفتاح التشغيل/الإيقاف

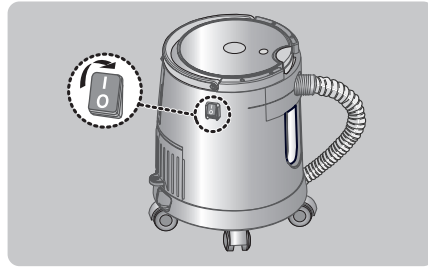

اضغط على زر "I" الموجود في أعلى يسار من جسم المكنسة.

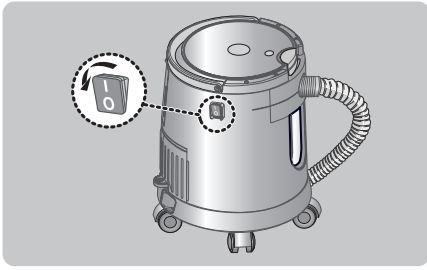

بعد التنظيف ، اضغط على زر "O" في أعلى يسار من جسم المكنسة.

## سلك التيار

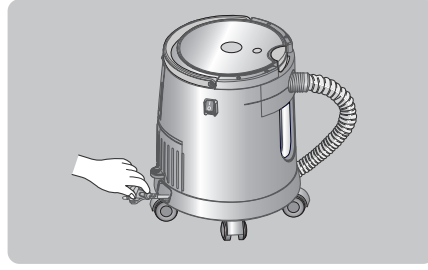

اللف
يمكنك إخراج سلك التيار الكهربائي الطويل بسهولة .

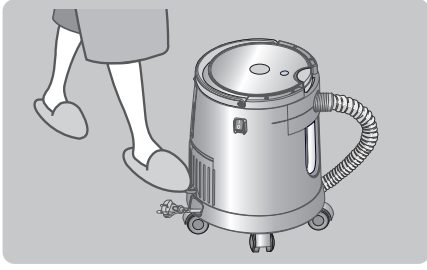

الإرجاع
بعد نزع القابس من مخرج التيار الكهربائي، اضغط على زر لف السلك بلطف بإصبع القدم . وعندها يلف السلك أوتوماتيكيا.

ملاحظة
عند نزع سلك التيار من مخرج التيار الكهربائي، امسك القابس وليس السلك مباشرا.

## الفوشلة

فوهة الأرض

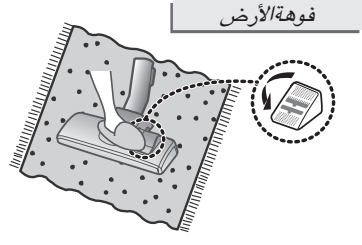

الاستخدام على السجادة

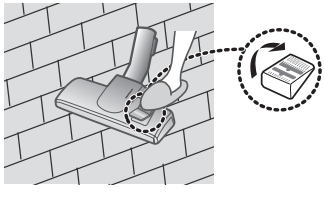

الاستخدام على القرميدة أو الأرض

فرشاة الغبار

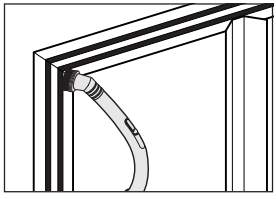

فرشاة الغبار للأثاث والرفوف والكتب ... الخ.

أداة ذات شق

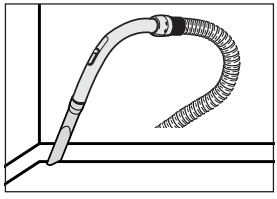

أداة ذات شق للراديتر والشقوق والزوايا وبين الأريكة.

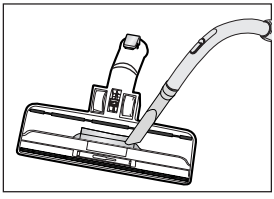

من أجل التنظيف الفعال، نظّف فوهة الأرض بواسطة أداة ذات شق.

## الدلو والمصفاة

⚠ تنبيه : انزع قابس التيار قبل إزالة الأشياء الغبارية.

١

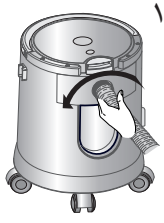

دوّر ملزم خرطوم الامتصاص باتجاه معاكس عقرب الساعة واسحبه الى الخارج.

٢

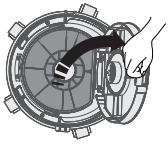

افتح غطاء الغبار.

٣

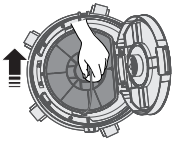

امسك مقبض الدلو واسحب الدلو الى الخارج.

٤



افصل المصفاة.

٥

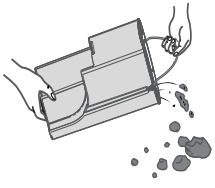

ازل الأشياء الغبارية.

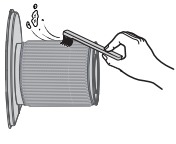

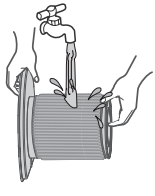

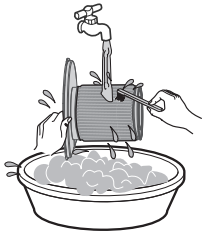

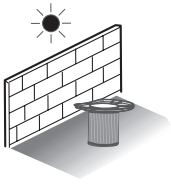

في حالة أن المصفاة ممتلئة بالغبار بعد استخدام المكنسة، نظّف المصفاة كما هو مبين في الشكل واستخدامها من جديد.

## ٤ حفظ الأدوات

### موضع الوقوف

من أجل حفظ الأدوات بسهولة، هذه المكنسة الكهربائية مزودة بنظام عروة داخلي في جسم المكنسة ، يحفظ الأنبوب وخرطوم الامتصاص وفوهة الأرض في الموضع العمودي.

### الملحقات

اسحب غطاء الملحقات الى الأسفل لاستخدام الأدوات الملحقة وحفظ أداة ذات شق وفرشاة الغبار كما هو مبين في الشكل.

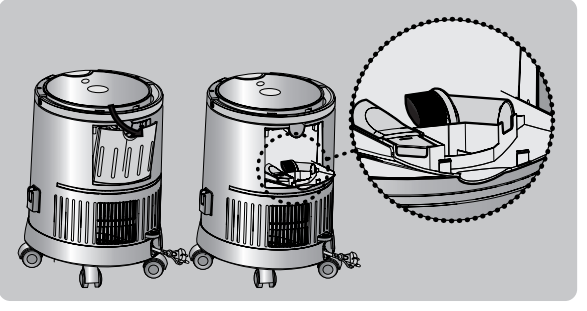

## ٥ تجهيزات السلامة

### الحماية بقطع الحرارة

المكنسة الكهربائية مزودة بنظام حماية بقطع الحرارة وإعادة الضبط الذاتي وهو يقطع التيار الكهربائي في حالة التسخين الزائد. والتسخين الزائد قد يؤدي الى سد المصفاة أو الفوهة أو الأنبوب أو الخرطوم. وبعد حل المشكلة وتبريد الموتور ، تبدأ المكنسة الكهربائية بالعمل من جديد أوتوماتيكيا.

# ٦ تحرى الخلل و إصلاحه

-إذا حدثت مشكلة

| المشكلة | السبب | الحل |
|---|---|---|
| لا تعمل المكنسة . | لا توصل القابس بإحكام. | وصّل قابس الجهاز بإحكام. |
| التقاط الغبار ضعيف. | الخطروم ، المصفاة ، الأنبوب أو الفوهة مسدودة. | ازل الشيء المسدود. |
| لا يلف السلك تماما. | تأكد من أن السلك غير ملتوي أو ملفوف بشكل غير مستوي. | اسحب ٢-٣ م من السلك الى الخارج واضغط على زر لف السلك. |
| يخرج غطاء الغبار . | لا تضغط عليه. | ادخل الغطاء الى المكنسة. |

**جن سام سونج شركة سام سونج في حالة أي استفسارات بخدمة عملاء الإتصال بمركز الإتصال للمنتجات سامسونج**

| Country | Customer Care Center ☎ | Web Site |
|---|---|---|
| U.A.E | 800SAMSUNG (7267864) | www.samsung.com/mea |